

**Honeywell**

**ADEMCO 6271V  
TouchCenter Keypad**

**User Guide**

# Table of Contents

---

<b>ABOUT THE TOUCHCENTER .....</b>	<b>4</b>
Introduction.....	4
The TouchCenter Interface.....	4
Navigating through the TouchCenter.....	5
About Your Home Screen.....	5
TouchCenter "Arming" Screen.....	7
<b>SYSTEM OVERVIEW.....</b>	<b>9</b>
Introduction to Your System .....	9
Burglary Protection .....	9
<i>Partitions</i> .....	9
<i>Zones</i> .....	9
<i>Entry/Exit Delays</i> .....	10
<i>Alarms</i> .....	10
<i>Memory of Alarm</i> .....	10
Fire Protection .....	10
User Codes.....	11
Extended Functionality .....	11
Safe Mode .....	11
<b>SECURITY SYSTEM OPERATION.....</b>	<b>13</b>
Introduction to Security System Operation .....	13
How to Arm the System.....	13
How to Arm Multiple Partitions.....	15
How to Display Faults.....	16
How to Bypass Zones.....	18
How to Remove Bypassed Zones .....	21
How to Disarm the System .....	23
How to Check the Status of Other Partitions .....	26
How to Send Emergency Messages.....	28
How to View the Event Log .....	29
<b>FIRE ALARM SYSTEM OPERATION.....</b>	<b>31</b>
Introduction to Fire Alarm System Operation.....	31
In Case of Fire Alarm.....	31
Silencing and Clearing a Fire Alarm .....	31
<b>USER CODE SETUP .....</b>	<b>33</b>

## ***Table of Contents (Cont'd)***

---

Introduction to User Code Setup .....	33
Authority Levels .....	33
How to Access User Setup .....	34
How to Add a User .....	35
How to Delete a User .....	39
How to Edit a User .....	40
<b>ADVANCED SYSTEM FEATURES .....</b>	<b>42</b>
Introduction to Advanced System Features .....	42
Console Emulation Mode .....	42
How to Enter Console Emulation Mode .....	42
<b>VOICE MESSAGES .....</b>	<b>44</b>
Introduction to Recording and Retrieving Messages .....	44
Recording a Voice Message .....	45
Retrieving and Deleting a Voice Message .....	46
<b>SUMMARY OF TOUCHCENTER LED OPERATION .....</b>	<b>47</b>
TouchCenter LED Operation .....	47
<b>TOUCHCENTER SETUP .....</b>	<b>48</b>
How to Access TouchCenter Setup Options .....	48
How to Access Setup .....	48
How to Adjust the Touch Screen Contrast .....	50
How to Adjust the Volume .....	51
How to Select Screen Backlight Off Activation Time .....	52
How to Select Homepage After Time .....	54
How to Set the Time and Date .....	56
<b>TOUCHCENTER OPERATING MODES .....</b>	<b>60</b>
Operating Modes (Chime, Voice, and Voice Chime) .....	60
How to Access Operating Modes .....	60
<b>MAINTAINING YOUR SYSTEM .....</b>	<b>62</b>
How to Clean your TouchCenter .....	62
Routine Care .....	63
<b>GLOSSARY .....</b>	<b>64</b>

# ***About the TouchCenter***

---

## **Introduction**

Congratulations on your ownership of an Honeywell Security System. You've made a wise decision in choosing it, for it represents the latest in security protection technology today.

This security system offers you burglary protection and may provide fire and emergency protection. To realize the full potential of the system, it is important that you feel comfortable operating it. Your system may consist of:

- One or more TouchCenter Keypads
- One or more other keypads for system control
- Various sensors for perimeter and interior burglary protection, plus a selected number of strategically placed smoke or combustion detectors
- Lighting/switching devices.

---

**UL** The home lighting feature has not been evaluated by UL.

---

The system uses microcomputer technology to monitor all zones, and provides appropriate information for display on the TouchCenter and/or other keypads used with the system. Your system may also have been programmed to automatically transmit alarm or status messages over the phone lines to a central alarm monitoring station.

## **The TouchCenter Interface**

The TouchCenter is an intuitive, graphical interface that combines security and optionally, home lighting control. With clear, simple controls on a touch-screen interface, the entire family will find the TouchCenter both easy to learn and easy to use.

As a security and home-automation interface, the TouchCenter may be used for:

- Quick and easy security system operation
- Message storage and retrieval
- Home lighting control

---

## ***About the TouchCenter (Cont'd)***

---

### **Navigating through the TouchCenter**

Navigation through the TouchCenter typically begins from the "Home" screen. This is the TouchCenter's main default screen (starting screen) and is the first screen you will see when the TouchCenter is powered up and initialized. It is from this screen that you will select from the main menu. Once you have made your selection, you will navigate through various sub-menus by touching buttons or icons to perform the function you desire.

### **About Your Home Screen**

Your "Home" screen is the gateway to your TouchCenter Keypad. From this screen you can:

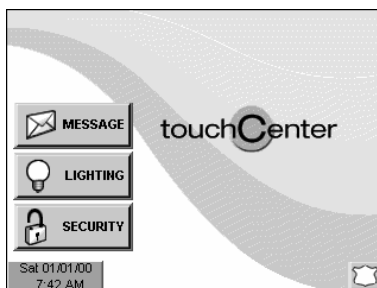
- control your security system, and optionally,
- control your message center, and
- control the premises lighting.


---

**UL** The home lighting feature has not been evaluated by UL.

---

Your "Home" screen is displayed most of the time, except when you select another screen option.



 The background and buttons shown on the "Home" screen in this manual are for example only. Your system installer may have changed the actual background and buttons shown on your "Home" screen.







---

## ***About the TouchCenter (cont'd)***

---

### ***Navigation Icon Descriptions***

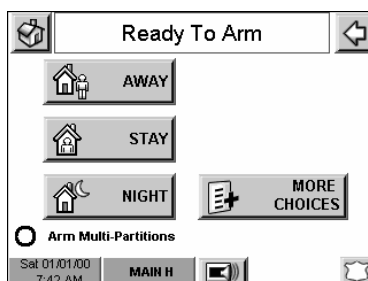
To aid in the navigation of the TouchCenter, a set of user-friendly icons has been provided. The appearance, function, and location of these icons is described below:


<b>ICON</b>	<b>LOCATION</b>	<b>FUNCTION</b>
	"Home" screen	Allows you to record and retrieve voice messages.
	"Home" screen	Allows you to turn certain devices on and off (if installed and programmed by your installer.)
	"Home" screen	Accesses "Arming" screen. <b>Note:</b> The lock symbol in the button indicates security system status. Unlocked– system disarmed Locked– system armed
	Upper left corner of most screens	Returns you to the TouchCenter "Home" screen. This icon is called the <b>Home</b> button within the text of this document.
	Upper right corner of most screens	Reverts to the last screen viewed. This icon is called the <b>Back</b> button within the text of this document.
	Lower right corner of screen	Displays Emergency functions (as programmed by your installer). This icon is called the <b>Panic</b> button within the text of this document. <b>Note:</b> This icon is displayed and active on all screens except while in the Clean Screen mode and during an LCD Display test in Diagnostics.

## About the TouchCenter (Cont'd)

### TouchCenter "Arming" Screen

From the "Home" screen, press **SECURITY** to access the TouchCenter "Arming" screen. Use this picture and the table that follows to become familiar with the TouchCenter security functions.



**Note:** The Voice Status (  ) button causes the TouchCenter to announce system status if depressed at least 10 seconds following its last depression. Note that Voice must be enabled for this button to function correctly during an alarm condition.










ITEM	FUNCTION
<b>AWAY</b>	Press this button to arm when no one will be staying on the premises. When armed in <b>AWAY</b> , the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm. You may also re-enter through the entrance door, but must disarm the system with your User Code within the entry delay period or an alarm will occur.
<b>STAY</b>	Press this button to arm when you are staying home, but might expect someone to use the entrance door later. When armed in <b>STAY</b> , the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. Late arrivals can enter through the entrance door without causing an alarm, but they must disarm the system within the entry delay period or an alarm will occur. <b>Note:</b> On some residential systems, if you press the Voice Status Icon while armed in the Stay Mode, the exit delay time will restart (if the feature was enabled by your installer).

## About the TouchCenter (cont'd)

ITEM	FUNCTION
<b>NIGHT</b>	Press this button to arm when you are staying home and do not expect anyone to use the entrance door. <i>Your installer may have configured NIGHT Mode differently; have him/her describe the actual settings of this mode.</i>
<b>Multi-Partitions</b>	Check this circle when you want to arm more than one partition. When Multi-Partitions is checked, all partitions within the system can be armed at one time (if the user is so authorized). When the Arm Multi-Partitions circle does not contain a check mark, each partition must be armed individually. Note: This option may not be shown for some single partition systems.
<b>MORE CHOICES</b>	Press this button for more Security, Lighting, and TouchCenter setup features.

### System Troubles

The “Arming” screen also displays an Icon(s) if a system trouble(s) occurs. The system trouble Icon is displayed to the left of the Panic button. If a trouble Icon is shown, contact your alarm company. The following Icons may be shown as applicable to your system:

ICON	MEANING
	AC Loss – The system is not receiving AC power.
	Bell Failure – The system bell or siren has a problem. Note: This Icon will be displayed when interfacing with residential panels only.
	Expander Failure – The system has a failure in an expansion module.
	Low Battery – The system battery, that powers the system during an AC power loss, is low.
	LRR Supervision Failure – The Long Range Radio or Alarmnet –I used to communicate with the central station has a supervision failure. Note: This Icon will be displayed when interfacing with residential panels only.
	Pager Failure – The system cannot communicate with an assigned pager.
	Phone Line 1 Failure – The system is not able to communicate with the central monitoring station over the primary phone line.
	Phone Line 2 Failure – The system is not able to communicate with the central monitoring station over the secondary phone line.
	Wireless Failure – The system is not able to communicate with its wireless devices.



# ***System Overview***

---

## **Introduction to Your System**

This system offers you burglary protection and may offer fire and emergency protection. Monitoring is accomplished with various contact and motion sensors for perimeter and interior burglary protection, plus the system may have strategically placed smoke, heat, or combustion detectors.

## **Burglary Protection**

The burglary protection portion of your system must be turned on or "armed" before it will sense burglary alarm conditions. Your system provides three modes of burglary protection: Away, Stay, and Night, and even allows you to "bypass" selected zones of protection while leaving the rest of the system armed (e.g. this enables you to arm the system but leave upper-story windows open.)

The system also provides a Chime mode and Voice mode, for alerting users to the opening and closing of doors and windows even while the system is disarmed.

## **Partitions**

This system may be configured to arm and disarm more than one area, each as if it had its own control. These areas are called partitions. Partitions are used when the user wants to disarm certain areas while leaving other areas armed, or to limit access to certain areas to specific individuals. Each user of the system can be authorized to operate all or only some partitions, and can be given different privileges in each. Information about Partitions is presented later in this document.

## **Zones**

Your system's sensing devices have been assigned to various "zones." For example, the sensing device on your Entry/Exit door may have been assigned to zone 01, sensing devices on windows in the master bedroom to zone 02, and so on. These numbers will appear on the display, along with an alpha descriptor for that zone (if programmed), when an alarm or trouble condition occurs.

## ***System Overview (cont'd)***

---

### **Entry/Exit Delays**

Your system has preset time delays, referred to as exit delay and entry delay. Whenever you arm your system, exit delay gives you time to leave through the designated exit door without setting off an alarm. Exit delay begins immediately after entering any arming command, and applies to all modes of arming protection. If programmed, a slow beeping will sound throughout the exit delay period. Additionally if programmed, a rapid beeping may sound during the final 10 seconds of the exit delay period.

**Note:** On some systems, pressing the Voice Status Icon restarts the exit delay. Refer to your control panel User Guide to see if this is applicable on your system.

Entry delay gives you time to disarm the system when you reenter through the designated entrance door. But the system must be disarmed before the entry delay period ends, or an alarm will occur. The keypad will beep during the entry delay period, reminding you to disarm the system. Ask your installer about the delay times programmed into your system.

### **Alarms**

When an alarm occurs, the TouchCenter (and any other keypads) and external sounders will sound, and the zone(s) causing the alarm are displayed. If your system is connected to a central monitoring station, an alarm message will also be sent. To stop the alarm sounding, simply disarm the system.

### **Memory of Alarm**

When an alarm condition occurs, the number(s) of the zone(s) that caused the problem are displayed, along with the type of alarm. These remain displayed until cleared.

**Note:** If you change screens, the alarm in memory can be viewed and cleared by selecting the Display Faults button on the Arming Screen.

### **Fire Protection**

The optional fire protection portion of your security system (if used) is always on and will sound an alarm if a fire condition is detected.

**Note:** If a fire or smoke detector develops a low battery, a “Fire Maintenance” message is displayed. To determine which zone is causing the problem, go to “Display Faults” to determine which zone has the low battery indication.

---

## System Overview (Cont'd)

---

### User Codes

Each user must be assigned a name with a corresponding 4-digit user code in order to gain access to various features and functions. Users for the system are programmed in a central user setup location that provides the specific questions for authorization level, partition assignment, and RF button assignment.

### Extended Functionality

Extended functions are advanced functions that can be accessed through a standard alpha keypad or through the console emulation mode on your TouchCenter touch screen. Refer to your Control Panel User Guide for these features.

### Safe Mode

The TouchCenter contains a Safe Mode of operation. In the rare event that the TouchCenter cannot successfully communicate in its graphic mode with the control panel, the Safe Mode is a backup mode that ensures that you can communicate with your system. In this mode, the TouchCenter operates much like a standard non-graphic keypad so that you can control your system until the problem is corrected.

If this situation occurs, the TouchCenter presents you with a message of “Problems detected. Start Keypad in Safe Mode?” and requests a “Yes” or “No” response. If you answer with “Yes”, the TouchCenter will go into the Safe Mode. If you answer with “No”, the TouchCenter will try communicating with the panel again. After 5 consecutive times of receiving no response, the TouchCenter will enter the Safe Mode automatically.

**Note:** Use care when providing the “Yes” or “No” response. Touching the screen outside the prescribed area may cause the background to come to the front. If this occurs, the Yes/No message that disappeared will time out in 30 seconds even though it is not visible. Then the keypad will reset into the Normal Mode (or Safe Mode if this is the third time that the warning message appeared).

While in the Safe Mode, the Home screen will display the Security button, Panic Button, and a message at the bottom of the screen as shown below:



**! SAFE MODE !**

## ***System Overview (cont'd)***

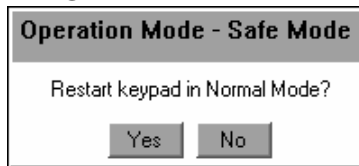
---

Note that this is a limited mode of operation. While in this mode:

- You can use the Security button to access the Console Emulation Mode of operation to try to clear your faults, disarm the system, or enter additional Alpha Keypad commands specified in you panel User Guide. You can perform almost all functions that you can perform from a standard non-graphic alpha keypad.
- You can depress the “Panic” key and generate Emergency Messages as defined in the panels home partition for this TouchCenter.
- The Armed and Ready LEDs on the front of the TouchCenter will indicate the TouchCenter’s home partition status. The Message LED is not active in the Safe Mode.
- The Chime mode will function in the Safe Mode: however, you will not have Voice, Voice Chime, or Message capability.
- When in Safe Mode, the lock on the Security button on the Home screen will always be shown in the unlocked position. Refer to the Armed LED for the true armed status of your system.
- When an alarm occurs in the Safe Mode, it is displayed on the Console mode screen only. It will not be shown on the Home screen.

To Exit the Safe Mode:

1. Press the ! SAFE MODE ! bar. You will be presented with the following popup message:



2. Select “Yes” to return to the Normal Mode of operation. The TouchCenter will reset and normal operation will return as long as the original conditions that caused the entry into Safe Mode do not still exist.

# Security System Operation

---

## Introduction to Security System Operation

You can arm your system in one of three arming modes: Away, Stay, and Night. The following table lists the three different arming modes and the results of each.

FEATURES FOR EACH ARMING MODE				
Arming Mode	Exit Delay	Entry Delay	Perimeter Armed	Interior Armed
Away	Yes	Yes	Yes	Yes
Stay	Yes	Yes	Yes	No
Night*	Yes	Yes (set for Away or Stay Mode) No (set for Instant or Maximum Mode)	Yes	Yes (set for Away or Maximum Mode) No (set for Stay or Instant Mode)

\*Your installer may have configured Night Mode differently; have your installer write the actual zone settings above.

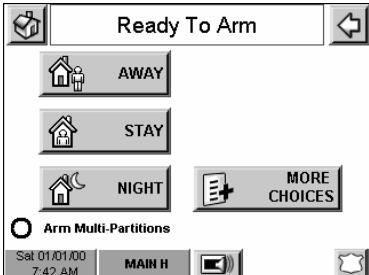
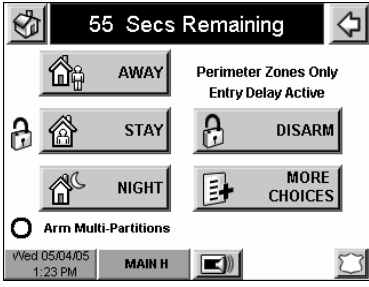
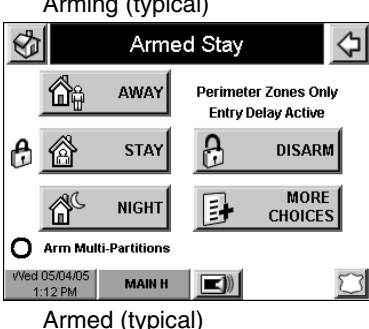
## How to Arm the System

Arming the system in any mode is performed in the same way, as described below.

**Note:** Close all perimeter windows and doors before arming.

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

## Security System Operation (cont'd)

SCREEN	ACTION
 <p>Ready To Arm</p> <p>AWAY</p> <p>STAY</p> <p>NIGHT</p> <p>MORE CHOICES</p> <p>Arm Multi-Partitions</p> <p>Sat 01/01/00 7:42 AM MAIN H</p>	<p>2. On the "Arming" screen, press the selected arming button.</p> <p><b>Note:</b> If Quick Arm is Not enabled in your system, you will receive a message to enter your User Code.</p> <ul style="list-style-type: none"> <li>○ The TouchCenter beeps twice (Away and Night Maximum Modes) or 3 times (Stay and Night Instant Modes)</li> <li>○ a <b>DISARM</b> button appears</li> <li>○ a text message appears stating which zones are arming and whether or not there is an entry delay</li> <li>○ the screen changes to display the remaining exit delay time, and</li> <li>○ an "open lock" appears next the the arming buttons as follows:            Away – Next to the Away button            Stay – Next to the Stay button            Instant – Next to the Night button            Night – Next to the Night button</li> <li>○ The exit delay time continues to decrement to one.</li> </ul>
 <p>55 Secs Remaining</p> <p>AWAY</p> <p>STAY</p> <p>NIGHT</p> <p>MORE CHOICES</p> <p>DISARM</p> <p>Perimeter Zones Only Entry Delay Active</p> <p>Arm Multi-Partitions</p> <p>Wed 05/04/05 1:23 PM MAIN H</p>	<p>Arming (typical)</p>
 <p>Armed Stay</p> <p>AWAY</p> <p>STAY</p> <p>NIGHT</p> <p>MORE CHOICES</p> <p>DISARM</p> <p>Perimeter Zones Only Entry Delay Active</p> <p>Arm Multi-Partitions</p> <p>Wed 05/04/05 1:12 PM MAIN H</p>	<p>When exit delay time expires, the screen automatically changes to indicate the system is "Armed" and the "lock" next to the button changes to a closed lock. The system is now armed in the selected mode.</p>

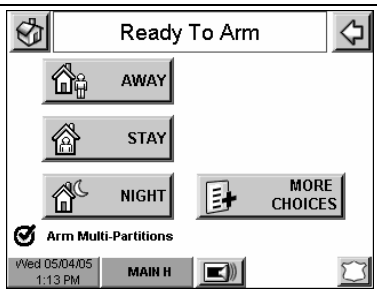
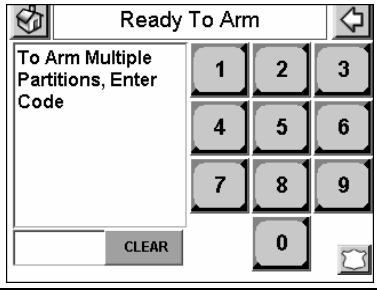
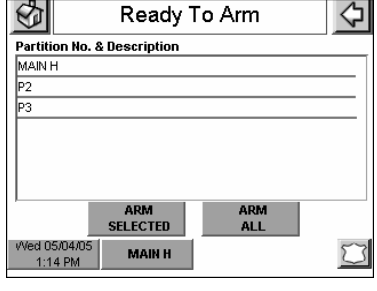
## ***Security System Operation (Cont'd)***

### **How to Arm Multiple Partitions**

**Note:** Some systems may not have multiple partitions and the "Arm Multi-Partitions" button may not be displayed.

To arm multiple partitions:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> <li>2. Make certain the Multi-Partitions button is checked.</li> </ol> <p><input checked="" type="checkbox"/> <b>Arm Multi-Partitions</b></p> <ol style="list-style-type: none"> <li>3. Press the appropriate arming mode button.</li> </ol> <p><b>Note:</b> If any zones are bypassed, a Display Faults button will also be displayed on this screen.</p>
	<ol style="list-style-type: none"> <li>4. When prompted, enter the user code authorized to access other partition(s).</li> </ol>
	<p>If the user code is accepted, the system displays the partitions that the user has access to.</p> <p><b>Note:</b> A user may have access to some or all of the available partitions! You have two arming options:</p> <p>To arm one or more partitions, highlight the partition(s) to be armed by touching it on the screen, then press <b>ARM SELECTED</b>.</p> <p>Press <b>ARM ALL</b> to arm all available partitions.</p>

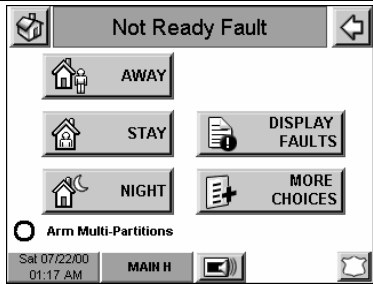


 

 
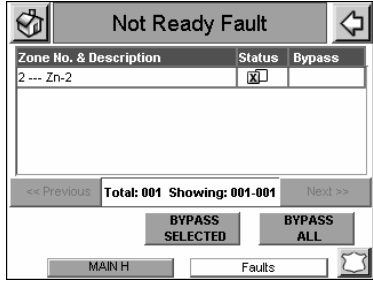
## Security System Operation (cont'd)

### How to Display Faults

The Display Faults function is used when you see a Not Ready Fault message and want to determine where the fault is and what type of fault it is.

To display faults do the following:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

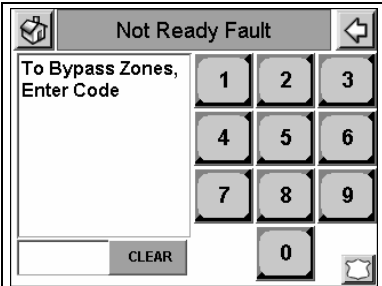
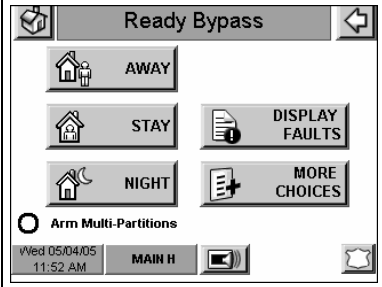
SCREEN	ACTION
	<p>2. From the "Arming" screen, press the <b>DISPLAY FAULTS</b> button. The "Display Faults" screen is displayed showing a listing of faulted and/or bypassed zones. The following symbols may be displayed on the "Display Faults" screen.</p> <ul style="list-style-type: none"> <li> Zone in alarm</li> <li> Zone has trouble</li> <li> Zone is faulted</li> <li> Zone has low battery</li> <li> Zone is bypassed</li> </ul>
	<p>3. As applicable, take corrective action such as closing a window or door to correct the fault. If the fault cannot be corrected, you may choose to bypass a zone by touching the zone to select it and depressing the <b>BYPASS SELECTED</b> button or bypass all faulted zones by depressing the <b>BYPASS ALL</b> button. The "User Authorization" screen is displayed with the instructions "<b>To Bypass Zones, Enter Code</b>".</p>



- Residential systems will not allow you to bypass fire or emergency zones. On commercial systems, a specified user may be allowed to bypass fire and system zones if the user was enabled by your system installer.
- To bypass zones the system must be disarmed first.
- Limits apply as to how many zones can be bypassed at one time. These limits are ten zones on residential and five zones on commercial systems.



## Security System Operation (Cont'd)

 <p>The screen displays a title bar with a home icon, the text "Not Ready Fault", and a back arrow. Below the title bar is a text input field with the prompt "To Bypass Zones, Enter Code". To the right of the input field is a numeric keypad with buttons for digits 1-9 and 0. Below the keypad is a "CLEAR" button and a small square icon.</p>	<p>4. Enter your 4-digit user code. The "Arming" screen is displayed showing the system status as <b>Ready-Bypass</b></p>
 <p>The screen displays a title bar with a home icon, the text "Ready Bypass", and a back arrow. Below the title bar are several buttons: "AWAY" (with a house and person icon), "STAY" (with a house icon), "NIGHT" (with a house and moon icon), "DISPLAY FAULTS" (with a document and exclamation mark icon), and "MORE CHOICES" (with a document and plus icon). At the bottom left, there is a radio button next to the text "Arm Multi-Partitions". At the bottom, there is a status bar showing the date and time "Wed 05/04/05 11:52 AM", the text "MAIN H", a speaker icon, and a small square icon.</p>	

## Security System Operation (cont'd)

### How to Bypass Zones

The Bypass function is used when you want to arm your system with one or more zones left open. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed.



- Residential systems will not allow you to bypass fire or emergency zones. On commercial systems, a specified user may be allowed to bypass fire and system zones if the user was enabled by your system installer.
- To bypass zones, the system must be disarmed first.
- Limits apply as to how many zones can be bypassed at one time. These limits are ten zones on residential systems and five zones on commercial systems.

To bypass zones do the following:

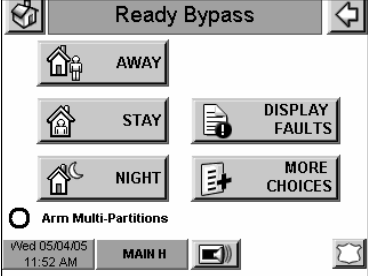
1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> <li>2. From the "Arming" screen, press the <b>MORE CHOICES</b> button. The "More Choices" screen is displayed. <b>Note:</b> If any zones are bypassed or faulted, a Display Faults button will also be displayed on this screen.</li> </ol>
	<ol style="list-style-type: none"> <li>3. Press the <b>SHOW ZONES</b> button on the "More Choices" screen. While the TouchCenter is requesting and receiving the zone data from the control panel, the screen displays <b>"Please Wait!"</b>. Then the zones, along with their current status, are displayed.</li> </ol>

## Security System Operation (Cont'd)

SCREEN	ACTION
	<p>4. Highlight the zone(s) to be bypassed by touching it on the screen when the zones are displayed.</p>
	<p>5. Press the <b>BYPASS SELECTED</b> button. The "User Authorization" screen is displayed with the instructions "<b>To Bypass Zones, Enter Code</b>". <b>Note:</b> If zones have already been bypassed, the top of this screen will indicate "Ready Bypass" and the screen will contain a Clear Bypasses button.</p>
	<p>6. Enter your 4-digit user code. The "More Choices" screen is displayed showing the system status as <b>Ready-Bypass</b></p>

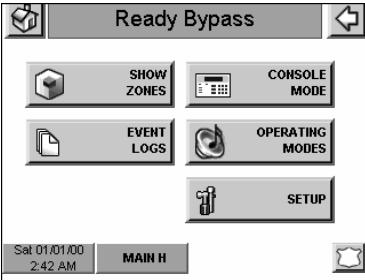
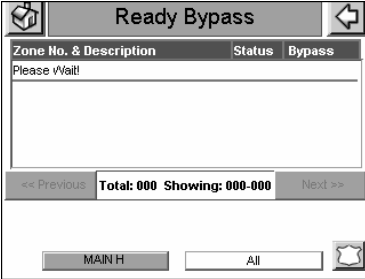
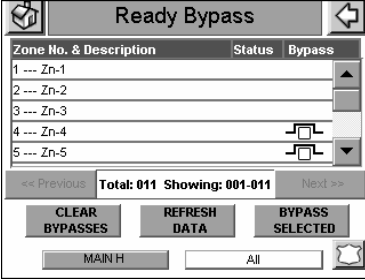

## Security System Operation (cont'd)

SCREEN	ACTION
 <p>Ready Bypass</p> <p>AWAY</p> <p>STAY</p> <p>NIGHT</p> <p>DISPLAY FAULTS</p> <p>MORE CHOICES</p> <p><input type="radio"/> Arm Multi-Partitions</p> <p>Wed 05/04/05 11:52 AM</p> <p>MAIN H</p>	<p>7. Press the <b>BACK</b> button to return to the "Arming" screen.</p>

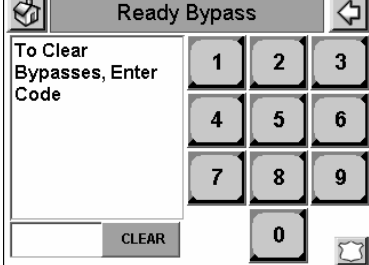
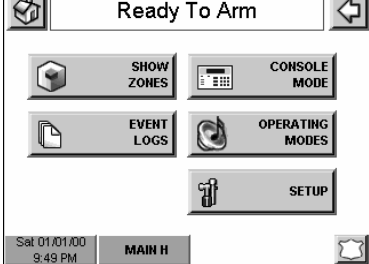
## Security System Operation (Cont'd)

### How to Remove Bypassed Zones

A bypassed zone will automatically be unbypassed when you disarm the system. If a zone is bypassed, you can remove the bypass as follows:

SCREEN	ACTION
 	<p>1. View bypassed zones by pressing the <b>SHOW ZONES</b> button.</p> <p>While the TouchCenter is requesting and receiving the zone data from the control panel, the screen displays "<b>Please Wait!</b>". Then the zones, along with their current status, are displayed.</p>
	<p>2. Remove zone bypasses by pressing the <b>CLEAR BYPASSES</b> button.</p> <p><b>Note:</b> Bypassed zones are indicated by the Bypass icon .</p>

## Security System Operation (cont'd)

SCREEN	ACTION
 <p>The screenshot shows a screen titled "Ready Bypass". On the left, it says "To Clear Bypasses, Enter Code". To the right is a numeric keypad with buttons for digits 1 through 9 and 0. Below the keypad is a "CLEAR" button and a star icon in the bottom right corner.</p>	<p>3. The "User Authorization" screen is displayed with the instructions To Clear Bypasses, Enter Code.</p> <p><b>Note:</b> If the system is armed and you unbyypass a zone, it will disarm the system.</p> <p>Enter your 4-digit user code. The "More Choices" screen is displayed showing the system as <b>Ready to Arm</b>.</p>
 <p>The screenshot shows a screen titled "Ready To Arm". It features several menu options: "SHOW ZONES", "CONSOLE MODE", "EVENT LOGS", "OPERATING MODES", and "SETUP". At the bottom left, it displays "Sat 01/01/00 9:49 PM" and "MAIN H". A star icon is in the bottom right corner.</p>	<p><b>Note:</b> This will not occur if any zone(s) is open (not ready).</p>

## ***Security System Operation (Cont'd)***

---


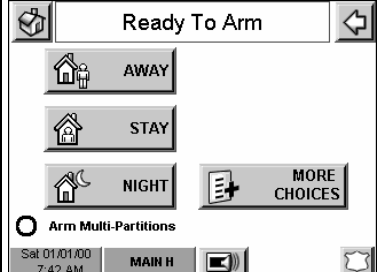
### **How to Disarm the System**

**IMPORTANT:** If you return and the main burglary sounder is on, DO NOT enter the premises, but call the police from a nearby safe location. If you return after an alarm has occurred and the main sounder has shut itself off, the TouchCenter will beep rapidly upon entering, indicating that an alarm has occurred during your absence. **LEAVE IMMEDIATELY and CONTACT THE POLICE** from a nearby safe location.

The system may be disarmed using either of two methods. One method is employed when you enter the premises and the other is when you have been in the premises with the system armed (i.e., Stay and Night arming modes).

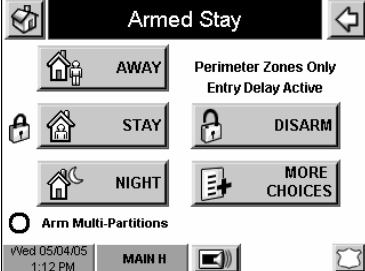
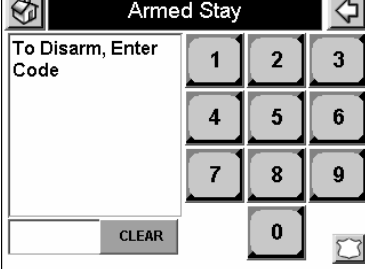
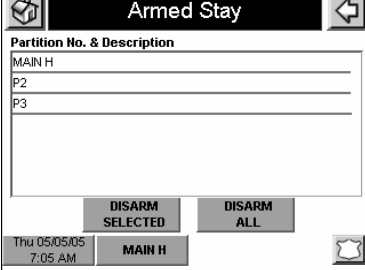
#### **To disarm the system when entering the premises:**

The TouchCenter will automatically display the Entry Delay Active screen when you enter the premises:

	<p>Enter your Code. The partition will be disarmed and the "Arming" screen is displayed showing the system as <b>Ready to Arm</b>.</p> <p><b>Note:</b> If you have a commercial system and a time window has been defined for when you may disarm the system, the system will not disarm if you are outside that time window.</p>
	

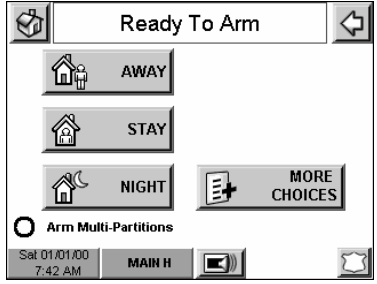
## Security System Operation (cont'd)

To disarm the system when already in the premises:

SCREEN	ACTION
	<p>1. Press the <b>DISARM</b> button on the "Armed" screen. The "User Authorization" screen is displayed with the instructions "<b>To Disarm, Enter Code</b>".</p>
	<p>2. Enter your 4-digit user code.</p> <p>If the Arm Multi-Partitions button on the "Armed" screen is not checked, the TouchCenter beeps once, the system will disarm, and the "Arming" screen is displayed showing the system as <b>Ready to Arm</b> or <b>Not Ready Fault</b> if any zone is faulted (open).</p> <p>If the Arm Multi-Partitions button on the "Armed" screen is checked, the <b>Partition No. &amp; Description</b> screen is displayed listing the partitions to which you have access.</p>
	<p>3. Press the <b>DISARM ALL</b> button if you wish to disarm the system. The TouchCenter beeps once and the "Arming" screen is displayed showing the system as <b>Ready to Arm</b> or not ready if any zone is faulted (open).</p> <p><b>Note:</b> If you wish to disarm only selected partitions, you must first highlight the partition(s) to be disarmed, then press the <b>DISARM SELECTED</b> button. The TouchCenter beeps once and the "Arming" screen is displayed showing the system as <b>Ready to Arm</b> or not ready if any zone is faulted (open).</p>



## ***Security System Operation (Cont'd)***

SCREEN	ACTION
	<p><b>Note:</b> Once the system is disarmed, the TouchCenter will return to the "Home" screen after the selected "To Home Page After" time has expired. This time is selected on the "Setup" screen.</p>

## ***Security System Operation (cont'd)***

---

### **How to Check the Status of Other Partitions**

This system supports between one and eight Partitions (depending on the system.) Partitioning enables a single physical alarm system to control up to eight areas of protection (partitions) depending on the system you have purchased. Each TouchCenter and other keypad is assigned a default partition for display purposes, and will show only that partition's information.

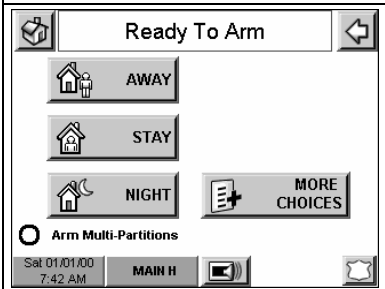
**Note:** A letter "H" following the partition name or number indicates that this is the default partition for the TouchCenter.

For example, if your physical site is a four-apartment housing unit, your alarm system may be configured with four partitions. Each apartment's zones (door, windows, smoke detectors, etc.) are assigned to separate partitions, giving each apartment independent arming/disarming control of its own partition (area). A landlord or manager may be granted access to all partitions, so he/she can control the entire system.

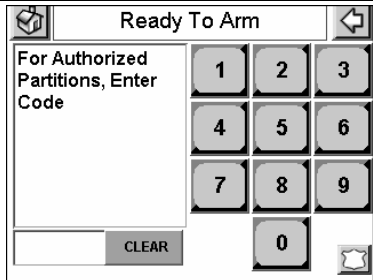
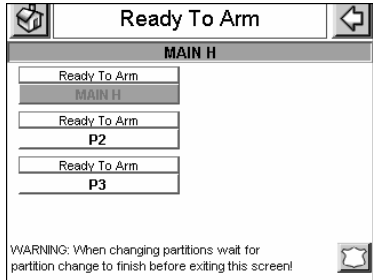
If a user is so authorized, a TouchCenter or other keypad in one partition can be used to perform system functions in another partition. (Note that only those partitions authorized and programmed by the installer can be accessed in this manner.)

To check the status of other partitions perform the following:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"><li>2. Press the "Current Partition" tab (lower edge of the screen; in this case it displays <b>Main H</b>). The "User Authorization" screen is displayed with the instructions "<b>For Authorized Partitions, Enter Code</b>".</li></ol>

## **Security System Operation (Cont'd)**

SCREEN	ACTION
 <p>The screenshot shows a screen titled "Ready To Arm". On the left, it says "For Authorized Partitions, Enter Code". To the right is a numeric keypad with buttons for digits 1 through 9, 0, and a "CLEAR" button. There are also navigation icons in the top right corner.</p>	<p>3. Enter the code authorized to access other partition(s). If the code is accepted, the system displays the partitions that user has access to. <b>Note:</b> A code may have access to some or all of the available partitions.</p>
 <p>The screenshot shows the same "Ready To Arm" screen, but now it displays a list of available partitions. The top partition is "MAIN H" and is highlighted. Below it are "P2" and "P3". Each partition has a "Ready To Arm" button next to it. A warning message at the bottom reads: "WARNING: When changing partitions wait for partition change to finish before exiting this screen!".</p>	<p>This screen displays the available partitions (in this case, Partitions 1 (Main), 2, and 3), and their current status. The current partition is shown at the top of the display (in this example, the device is attached to Partition 1 (<b>Main H</b>)). To change this assignment, select the appropriate button (e.g. press <b>P2</b> to switch control to Partition 2). <b>Note:</b> After leaving this screen when using a residential panel, the selected partition in the TouchCenter will automatically revert back to the TouchCenter's home partition after two minutes. When using commercial panels, you must select the TouchCenter's home partition to return to it.</p>

## ***Security System Operation (cont'd)***

---

### **How to Send Emergency Messages**

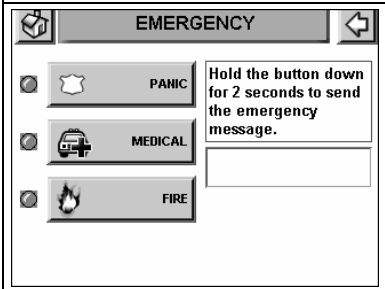
---



- Emergency messages are optional and may not be available on your system. Ask your system installer if emergency messages are available on your system.
  - The **Emergency** screen cannot be accessed while running a screen diagnostic test or while in the clean screen mode.
- 

An emergency message for fire, panic, or medical can be sent to the central monitoring station from the **Emergency** screen. The **Emergency** screen can be accessed by activating the "PANIC" Icon located on the lower right corner of the screen.

Once the **Emergency** screen is accessed, perform the following to send an emergency message.

SCREEN	ACTION
 <p>The screenshot shows the 'EMERGENCY' screen with three buttons: PANIC (with a panic icon), MEDICAL (with a medical icon), and FIRE (with a fire icon). To the right of these buttons is a text box containing the instruction: 'Hold the button down for 2 seconds to send the emergency message.' There is also a small box to the right of the text box, likely for a 'Message Sent' confirmation.</p>	<p>On the Emergency screen press and hold (for at least 2 seconds) the associated alarm button for the type of emergency message you want to send (<b>FIRE</b>, <b>PANIC</b>, or <b>MEDICAL</b>). When the message is sent, the associated "Message Sent" statement is displayed in the text box to the right of the buttons. You are immediately returned to the screen from which you pressed the "PANIC" Icon.</p>

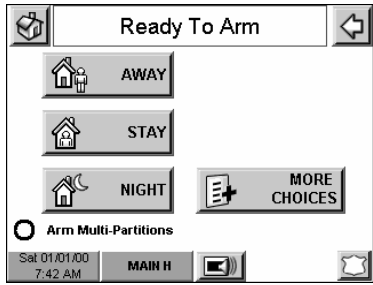
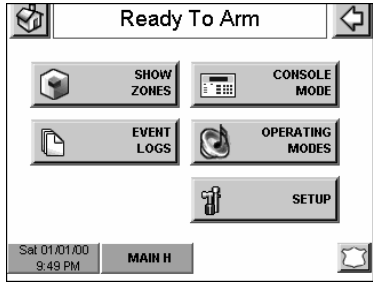
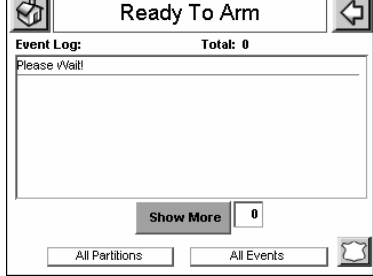
## ***Security System Operation (Cont'd)***

### **How to View the Event Log**

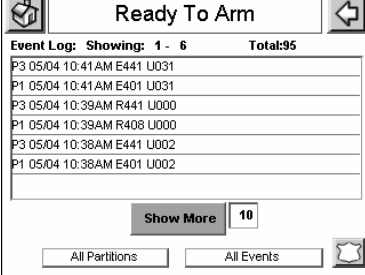
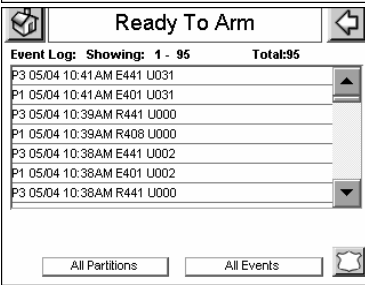
Your system has the ability to record various events in a history log wherein each event is recorded with the time and date of its occurrence. The control panel must be programmed to record various system events in installer programming mode.

To view the Event Log, perform the following:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> <li>2. From the "Arming" screen press the <b>MORE CHOICES</b> button. The "More Choices" screen is displayed.</li> </ol>
	<ol style="list-style-type: none"> <li>3. Press the <b>EVENT LOGS</b> button on the "More Choices" screen. The "Event Log" screen is displayed. <b>Note:</b> While TouchCenter is requesting and receiving the event log data from the control panel, the "Event Log" screen displays <b>"Please Wait!"</b>.</li> </ol>
	

## Security System Operation (cont'd)

SCREEN	ACTION
 <p><b>Ready To Arm</b></p> <p>Event Log: Showing: 1 - 6 Total:95</p> <p>P3 05/04 10:41AM E441 U031  P1 05/04 10:41AM E401 U031  P3 05/04 10:39AM R441 U000  P1 05/04 10:39AM R408 U000  P3 05/04 10:38AM E441 U002  P1 05/04 10:38AM E401 U002</p> <p>Show More 10</p> <p>All Partitions All Events</p>  <p><b>Ready To Arm</b></p> <p>Event Log: Showing: 1 - 95 Total:95</p> <p>P3 05/04 10:41AM E441 U031  P1 05/04 10:41AM E401 U031  P3 05/04 10:39AM R441 U000  P1 05/04 10:39AM R408 U000  P3 05/04 10:38AM E441 U002  P1 05/04 10:38AM E401 U002  P3 05/04 10:38AM R441 U000</p> <p>All Partitions All Events</p>	<p>The first six events will be displayed.</p> <p>To view all items, press the <b>Show More</b> button and press the up/down arrows to scroll through the event log.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• When <b>All Partitions</b> or <b>All Events</b> button is pressed, and more than 100 events exist, the <b>Show More</b> button text will change to read <b>Next&gt;&gt;</b>. If you press the <b>Next&gt;&gt;</b> button, a <b>&lt;&lt;Previous</b> button will be shown. The <b>Next&gt;&gt;</b> and <b>&lt;&lt;Previous</b> buttons will show the next 100 or previous 100 events.</li> <li>• The <b>Next&gt;&gt;</b> and <b>&lt;&lt;Previous</b> buttons will <b>be</b> shown for commercial panels only when 100 or more events are in the log. They will not be shown for residential panels.</li> </ul>

# ***Fire Alarm System Operation***

---

## **Introduction to Fire Alarm System Operation**

Your fire alarm system (if installed) is on 24 hours a day, providing continuous protection. In the event of an emergency, the installed smoke and heat detectors will automatically send signals to your Control/Communicator, triggering a loud interrupting sound from the keypad. An interrupted sound will also be produced by optional exterior sounders. A FIRE message will appear at your keypad and remain on until you silence the alarm.

## **In Case of Fire Alarm**

1. Should you become aware of a fire emergency before your detectors sense the problem, go to your nearest keypad and manually initiate an alarm by pressing the panic key assigned as FIRE emergency (if programmed by the installer) and hold down for at least 2 seconds.
2. Evacuate all occupants from the premises.
3. If flames and/or smoke are present, leave the premises and notify your local Fire Department immediately.

## **Silencing and Clearing a Fire Alarm**

1. Silence, acknowledge, and clear the alarm by:

### *Residential systems –*

- a. Press “Touch here to Silence” on the display to silence the alarm.
- b. Press the **CLEAR** button followed by your code. This will acknowledge the alarm and disarm the system (if armed).
- c. Press the **DISPLAY FAULTS** button on the Arming screen. The faulted fire zone will be displayed.
- d. Press the **CLEAR** button and then enter your code. This will clear the Fire Alarm from the system.

### *Commercial systems –*

- a. Enter your code. This will silence and acknowledge the alarm and disarm the system (if armed).
- b. Press the **DISPLAY FAULTS** button on the Arming Screen. The faulted zones will be displayed.

## ***Fire Alarm System Operation (cont'd)***

---

- c. Press the **CLEAR** button and then enter your code. This will clear the Fire Alarm from the system.
2. If the keypad does not indicate a **READY** condition after the second sequence, press the **DISPLAY FAULTS** key on the Arming screen to display the zone(s) that are faulted. Be sure to check that smoke detectors are not responding to smoke or heat producing objects in their vicinity. In this case, eliminate the source of heat or smoke.
3. If this does not remedy the problem, there may still be smoke in the detector. Clear it by fanning the detector for about 30 seconds.
4. When the problem has been corrected, clear the display by entering the **DISPLAY FAULTS** button, selecting the fire zone, pressing the **CLEAR** button and then entering you user code.

**Note:** Contact your Security Company for servicing if you have further problems with your fire system.



# User Code Setup

---

## Introduction to User Code Setup

Each user must be assigned a name with a corresponding 4-digit user code in order to gain access to various features and functions. The TouchCenter can hold the identity for 10 Users in its memory. If additional Users are needed, define the additional Users using the Console Emulation Mode.

Users for the system are programmed in a central user setup location that provides the specific questions for authorization levels assigned to different users. You may want these users to be the same, but there are situations in which you may want a user to have limited capabilities. These capabilities are defined by the Authority Level assigned each user.

## Authority Levels

Authority levels define the system functions a particular user can perform. Depending on the authority assigned to you, there are certain system functions you may be prohibited from performing. The following information describes the authority levels that can be assigned through the TouchCenter and provides the equivalent authority level name that you will find if you are reading your alarm system manuals. The authority levels that can be assigned through the TouchCenter are as follows:

Touch-Center Authority Level	Functions	Equivalent System Name	
		Residential Systems	Commercial Systems
Master	Can perform all security functions, add/delete users in assigned partition, program scheduled events, and change partition master code	Partition Master	Level 1 Master
Normal	Perform security functions (arm, disarm)	Standard User	Level 3 Operator A

## ***User Code Setup (cont'd)***

Guest	Can arm the system in assigned partitions, but cannot disarm the system unless the system was armed with this code. <b>Note:</b> Do not assign this level if Quick Arm is enabled in your system.	Guest	Level 4 Operator B
No Access	Used to restrict access from a partition.	N/A	N/A

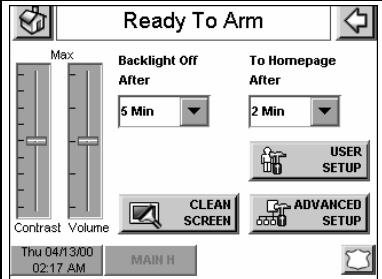
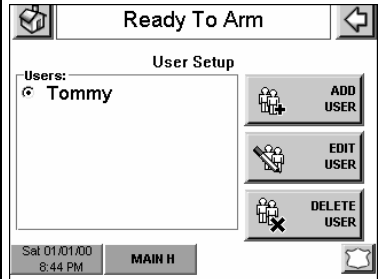
### **How to Access User Setup**

Access User Setup as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

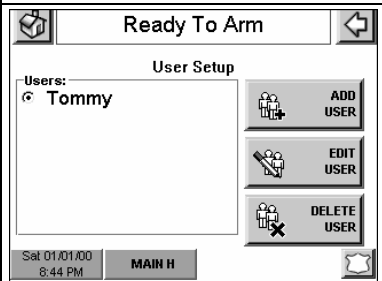
SCREEN	ACTION
	<ol style="list-style-type: none"> <li>2. Press the <b>MORE CHOICES</b> button. The "More Choices" screen is displayed.</li> </ol>
	<ol style="list-style-type: none"> <li>3. Press the <b>SETUP</b> button on the "More Choices" screen. The "Setup" screen is displayed.</li> </ol>

## User Code Setup (Cont'd)

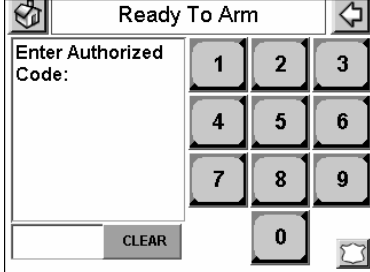
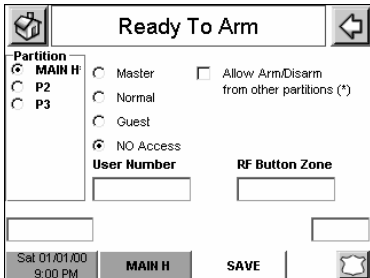
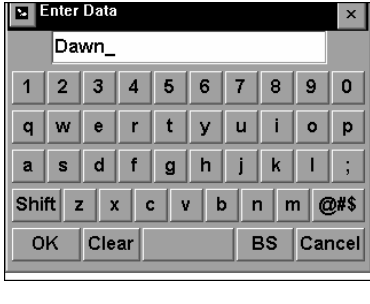
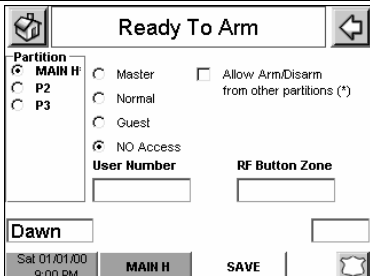
SCREEN	ACTION
	<p>4. Press the <b>USER SETUP</b> button on the "Setup" screen. The <b>User Setup</b> screen is displayed.</p>
	

### How to Add a User

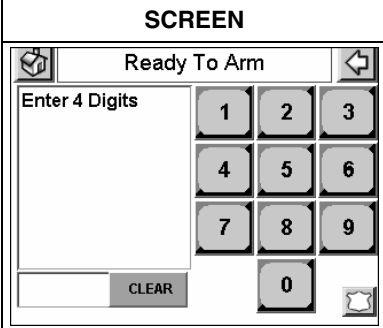
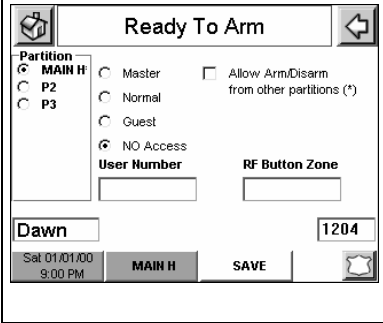
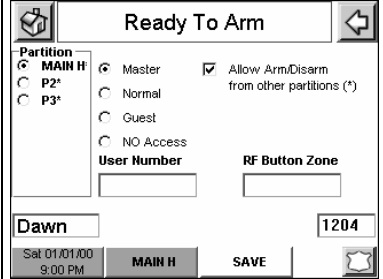
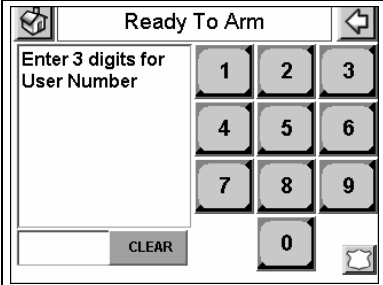
Add a user as follows:

SCREEN	ACTION
	<p><b>Note:</b> Three selections are available: add a user, edit a user, or delete a user.</p> <p>1. To add a user, press the <b>ADD USER</b> button. The "User Authorization" screen is displayed with the instructions "<b>Enter Authorized Code</b>".</p>

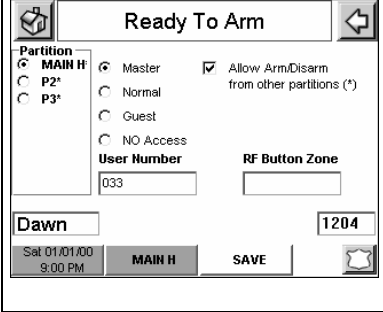
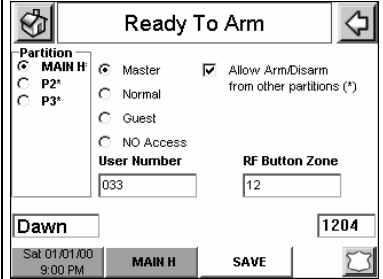
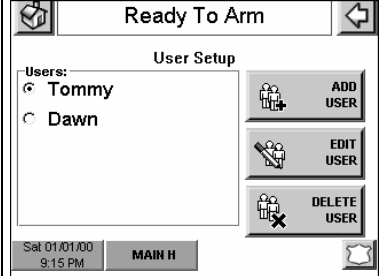
## User Code Setup (cont'd)

SCREEN	ACTION
	<p>2. Enter your Authorized code. The "User Options" screen is displayed.</p> <p><b>Note:</b> The authorized code for adding users is dependent upon the system you have. Check with your system installer to determine who can add users.</p>
	<p>3. Press the box next to <b>Enter User Name</b>. The <b>Enter Data</b> keyboard screen is displayed.</p>
	<p>4. Type in the user name (6 characters max.) and press the <b>OK</b> button. The "User Options" screen is displayed with <b>Enter User Code...</b> displayed.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Use the <b>Shift</b> button for capital letters.</li> <li>• Use the <b>BS</b> (Backspace) button to make corrections.</li> <li>• The <b>@#\$</b> button is not available for use at this time. These characters cannot be saved to the control panel.</li> </ul>
	<p>5. Touch the box next to <b>Enter User Code...</b> The "User Authorization" screen is displayed with the instructions <b>Enter 4 Digits</b>.</p>

## User Code Setup (Cont'd)

SCREEN	ACTION
	<p>6. Enter the 4-digit code for this user. The "User Options" screen is displayed with the user's name and code displayed.</p>
	<p>7. Select the partitions and access level for this user. After the access level is selected, the <b>Allow Arm/Disarm from other partitions</b> box becomes available when interfacing with commercial panels. (On residential panels, this box is automatically selected and can not be deselected.)</p> <p>If this user is to be able to Arm and Disarm from other partitions in commercial panels, touch this box.</p>
	<p>8. Touch the box below the <b>User Number</b>. The "User Number" screen is displayed with the instructions to <b>Enter 3 Digits</b>.</p> <p><b>Note:</b>When assigning User Numbers for residential panels, enter 0 as the first of the three digits.</p>
	<p>9. Enter the 3-digit user number for this user. The "User Options" screen is displayed with the user's name, number, and code displayed.</p>

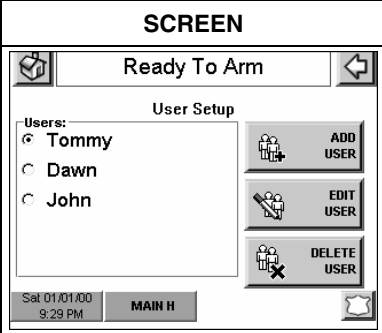
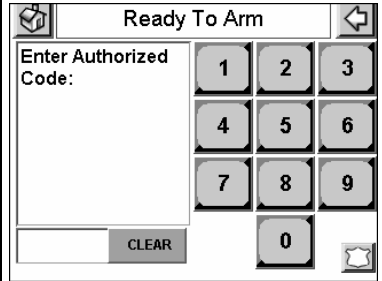
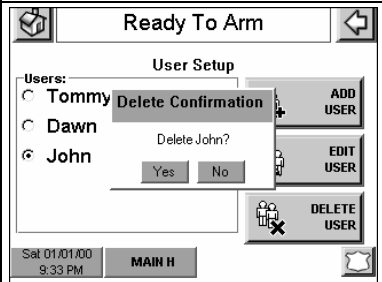
## User Code Setup (cont'd)

SCREEN	ACTION
	<p>10. If this user is assigned an RF button zone, touch the box below the <b>RF Button Zone</b>. The "RF Button Zone" screen is displayed with the instructions to enter 2 or 3 digits based on the alarm system being used. Enter the RF Button Zone number that was previously programmed in the control panel. Note that the RF Button Zone does not appear for every user. The User Options screen will be redisplayed.</p>
	<p>11. Press the <b>SAVE</b> button. The system will save the configuration. When the save is complete, the <b>User Setup</b> screen is displayed with the new user's name shown.</p>
	

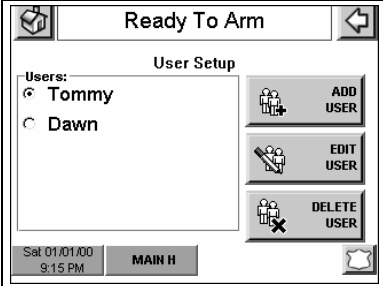
## User Code Setup (Cont'd)

### How to Delete a User

Delete a User as follows:

SCREEN	ACTION
	<p>1. From the <b>User Setup</b> screen, touch the circle next to the user to be deleted and press the <b>DELETE USER</b> button. The "User Authorization" screen is displayed with the instructions "<b>Enter Authorized Code</b>".</p>
	<p>2. Enter your Authorized code. The "Delete Confirmation" screen is displayed. <b>Note:</b> The authorized code for deleting users is dependent upon the system you have. Check with your system installer to determine who can delete users.</p>
	<p>3. Press the appropriate button. The <b>User Setup</b> screen is displayed.</p>

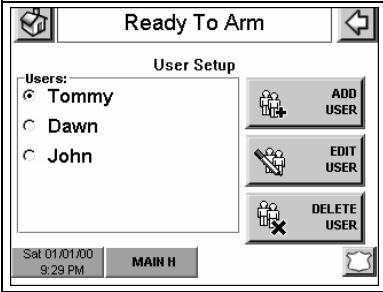

## User Code Setup (cont'd)

SCREEN	ACTION
	

### How to Edit a User

**Note:** You can not edit a User's name. To modify a User name, you must delete the User and re-enter User.

Edit a user as follows:

SCREEN	ACTION
	<p>1. From the <b>User Setup</b> screen, touch the circle next to the user to be edited and press the <b>EDIT USER</b> button. The "User Authorization" screen is displayed with the instructions "<b>Enter Authorized Code:</b>".</p>
	<p>2. Enter your Authorized code. The "User Options" screen is displayed.</p> <p><b>Note:</b> The authorized code for editing users is dependent upon the system you have. Check with your system installer to determine who can edit users.</p>



## User Code Setup (Cont'd)

SCREEN	ACTION
	<p>3. Select the options needed for this user and press the <b>SAVE</b> button. The configuration changes are saved and you are returned to the <b>User Setup</b> screen.</p>

# ***Advanced System Features***

---

## **Introduction to Advanced System Features**

While most of the commonly used security functions are available from the TouchCenter's advanced user interface, there are some less used, advanced features that can either be accessed through Console Emulation mode on the TouchCenter or a standard alpha keypad. To use features not supported by the TouchCenter, refer to your Control Panel User Guide.

## **Console Emulation Mode**

Console Emulation Mode allows you to use a TouchCenter interface just as you would a regular system keypad. All commands shown in Console Emulation mode can also be executed from a standard alpha keypad.

### **Notes:**

- It is recommended that you **do not** use the Console Emulation Mode to enter GOTO commands. Unsatisfactory operation may result from issuing GOTO commands in Console Emulation.
- Two button panics (1 & \*, 3 & #, and \* & #) **do not** function in the Console Emulation Mode. The A, B, C, and D buttons do function if programmed as panic keys. Check with your system installer for details.
- Commercial systems with Alpha keypads have a feature where if you depress a key for 5 seconds, you will receive self help messages about the pressed key or holding the \* key for 5 seconds will provide zone descriptors. These features do not function in the TouchCenter as all key presses are instantaneous.

## **How to Enter Console Emulation Mode**

To access the TouchCenter "Keypad," do the following:

## **Advanced System Features (Cont'd)**

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<p>2. Press the <b>MORE CHOICES</b> button. The "More Choices" screen is displayed.</p>
	<p>3. Press the <b>CONSOLE MODE</b> button on the "More Choices" screen. The "Keypad" screen is displayed.</p>
	<p>4. Perform functions as you would from a regular alpha keypad.</p>

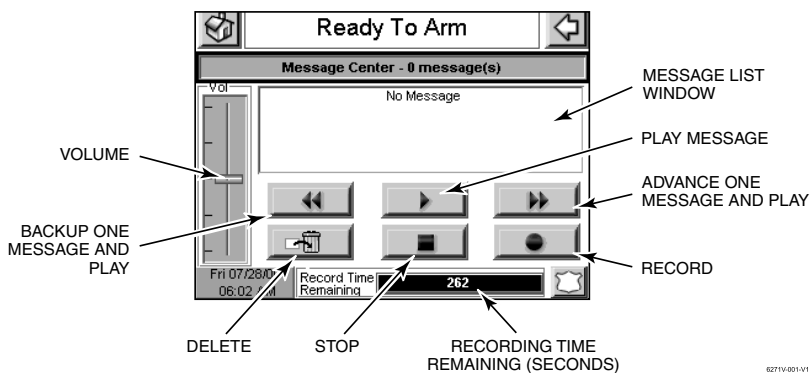
# Voice Messages

## Introduction to Recording and Retrieving Messages

The 6271V provides the capability of recording voice messages for others on the premises. The number of messages is not limited however; the total time of all messages added together cannot exceed 262 seconds.

**Note:** The voice messages are stored in the memory of the 6271V. *All messages will be lost* if the 6271V loses power or if it is reset.

Voice messages are recorded and retrieved using the “Message Center” screen. The below illustration identifies the various areas and buttons on the “Message Center” screen.




**Message Center Screen**

## Voice Messages (Cont'd)

### Recording a Voice Message

To record a voice message, do the following:

1. From the "Home" screen, press the **Message** button. The "Message Center" screen is displayed.

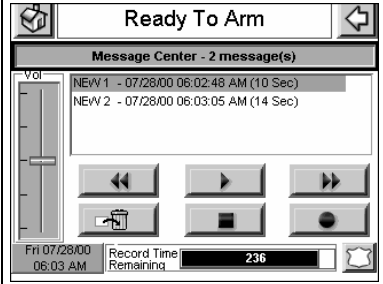
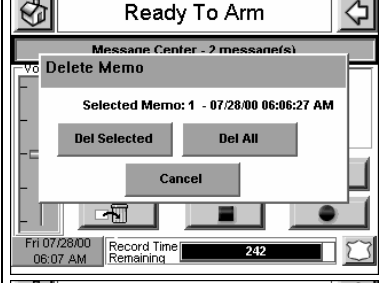

SCREEN	ACTION
	<ol style="list-style-type: none"><li>2. Press the <b>Record</b> button and record your message while staying within approximately one foot of the TouchCenter and speaking at a normal voice volume. As you are recording your message, the remaining time counter counts down to indicate the total remaining time available and a "Recording New Memo..." message is displayed above the message list window.</li><li>3. Press the <b>Stop</b> button when you are done recording the message. The message indicator will be flashing and the message will be listed in the message list window.</li><li>4. To record additional messages, repeat steps 2 and 3 above or to exit, depress the <b>BACK</b> or <b>HOME</b> button and the "Home" screen will be displayed.</li></ol>

## Voice Messages (Cont'd)

### Retrieving and Deleting a Voice Message

To retrieve a voice message, do the following:

1. From the "Home" screen, press the MESSAGE button. The "Message Center" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> <li>2. Select the message you wish to listen to by touching it in the message list and then pressing the <b>Play Message</b> button. As the message is being played, a "Play (x): Voice Memo..." message is displayed above the message list window. When the end of the message is reached, the playback will stop.</li> </ol>
	<ol style="list-style-type: none"> <li>3. To listen to the next message, press the <b>Advance One Message and Play</b> button.           <p><b>Note:</b> At anytime you may highlight a message you want to listen to and press the <b>Play Message</b> button as described in step 2 above.</p> </li> </ol>
	<ol style="list-style-type: none"> <li>4. If you wish to delete messages, press the <b>Delete</b> button. The "Delete Memo" screen will be displayed. You can press the <b>Del Selected</b> button to delete only the currently selected message and return to the "Message Center" screen, <b>Del All</b> button to delete all messages and return to the "Message Center" screen, or the <b>Cancel</b> button to return to the "Message Center" screen without deleting any messages.</li> <li>5. To exit, depress the <b>BACK</b> or <b>HOME</b> button and the "Home" screen will be displayed.</li> </ol>

## ***Summary of TouchCenter LED Operation***

---

### **TouchCenter LED Operation**

The TouchCenter has three LEDs labeled - ARMED, READY and MESSAGE. The ARMED LED is red, READY LED is green and MESSAGE LED is yellow. Each LED's on and off state has different meanings as described below.

<b>LED</b>	<b>DESCRIPTION</b>
ARMED	ON – Security system is armed. OFF – Security system is not armed.
READY	ON – Security system is disarmed and ready to arm. OFF – Security system is armed or disarmed but not ready. If disarmed, faults or troubles are present.
MESSAGE	FLASHING – The 6271V contains new message(s) for the User OFF – No new messages.

# TouchCenter Setup

## How to Access TouchCenter Setup Options

Setup allows you to make changes to the way your TouchCenter is operating. The options that can be changed are:

- Adjust the touch screen contrast
- Adjust the TouchCenter sounder volume
- Change the time interval that must pass prior to the TouchCenter turning off the touch screen backlight
- Change the time interval that must pass prior to the TouchCenter returning to the "Home" screen

Additionally, you may enter the **User Setup** screen, **Advanced Setup** screen (if enabled by your system installer), or **Clean Screen** (maintenance mode) from the "Setup" screen by pressing the corresponding button.

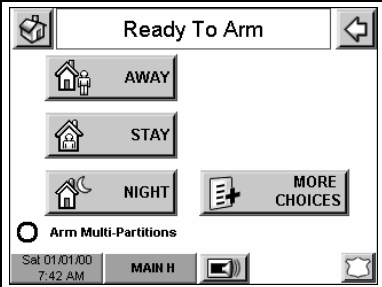


The "Advanced Setup" button may provide access to additional options if enabled by your system installer. Ask your system installer to explain any options accessible with this button.

## How to Access Setup

Access the "Setup" features as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	2. Press the <b>MORE CHOICES</b> button. The "More Choices" screen is displayed.



## TouchCenter Setup (Cont'd)

SCREEN	ACTION
	<p>3. Press the <b>SETUP</b> button on the "More Choices" screen. The "Setup" screen is displayed.</p>

## ***TouchCenter Setup (cont'd)***

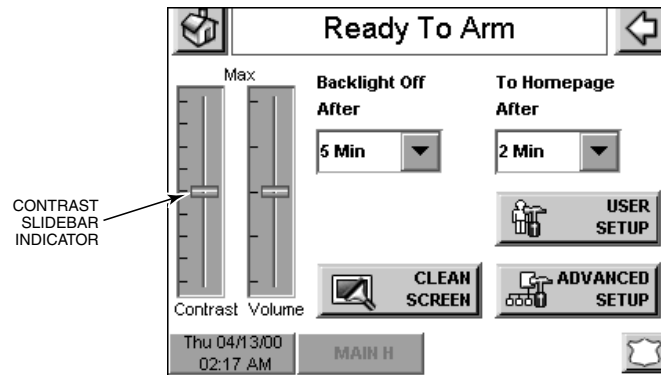
---

### **How to Adjust the Touch Screen Contrast**

You may adjust the touch screen contrast as follows:

If...	Then...
you want to increase contrast	move the slide bar above the current contrast setting.
you want to decrease contrast	move the slide bar below the current contrast setting.

If you have made any changes in the contrast settings, when you exit this screen you will be presented with a pop-up asking if you want to remember the new settings.



### ***Touch Screen Contrast Control***

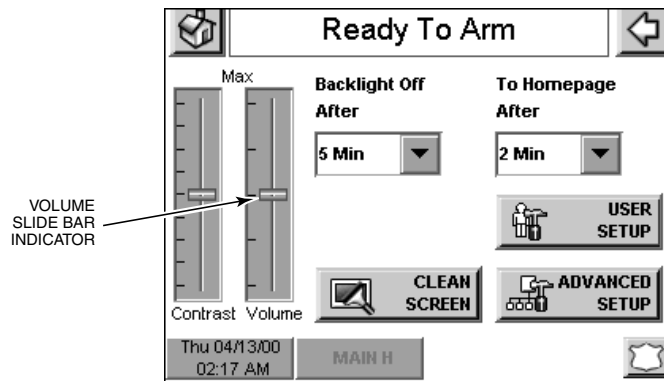
## ***TouchCenter Setup (Cont'd)***

### **How to Adjust the Volume**

You may adjust the TouchCenter sounder volume by pressing your finger on the TouchCenter slide bar associated with the "Volume" scale and doing the following:

If...	Then...
you want to increase volume	move the slide bar above the current volume setting..
you want to decrease volume	move the slide bar below the current volume setting.

If you have made any changes in the volume settings, when you exit this screen you will be presented with a pop-up asking if you want to remember the new settings.

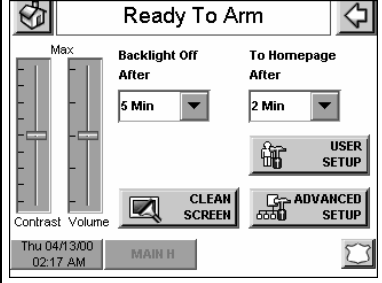
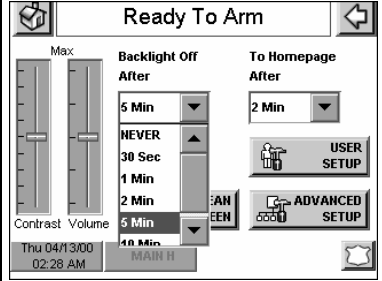


### ***TouchCenter Volume Control***

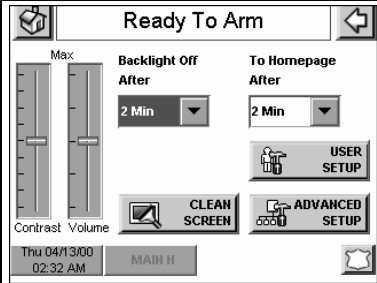
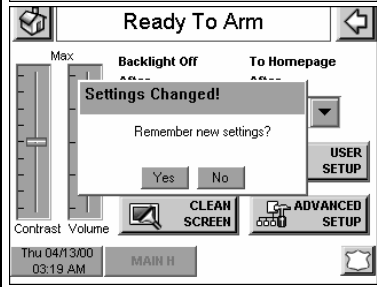
## TouchCenter Setup (cont'd)

### How to Select Screen Backlight Off Activation Time

When the TouchCenter is not active, it will automatically turn the backlight off after the selected backlight off time has expired (unless "Never" option is selected). To select the screen backlight time, do the following:

SCREEN	ACTION
	<p>1. On the "Setup" screen, press the <b>Backlight Off After:</b> "arrow" button. A drop-down list displaying the time period options is displayed.</p>
	<p>2. Select the time period option you want by pressing it. The drop-down list closes automatically and the selection is displayed.  <b>Note:</b> Additional options can be viewed by using the up/down "arrows" to scroll through the time period options.</p>

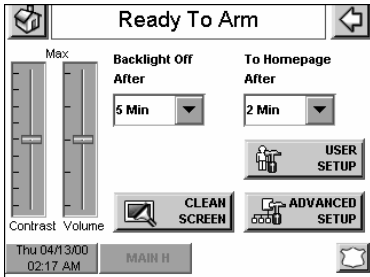
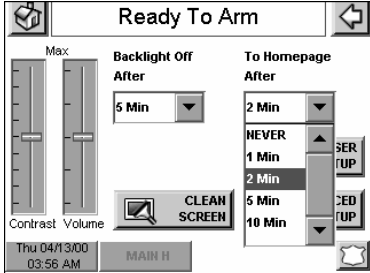
## TouchCenter Setup (Cont'd)

SCREEN	ACTION
	<p>3. Press either the "Home" or "Back" button. A <b>Settings Changed!</b> pop-up window is displayed asking <b>"Remember New Settings?"</b> Select <b>Yes</b> to save the change or <b>No</b> to discard the change.</p>
	<p>When the Update is complete the TouchCenter goes to the "Home" screen or "More Choices" screen depending on whether you pressed the "Home" or "Back" button, respectively.</p>

## TouchCenter Setup (cont'd)

### How to Select Homepage After Time

When the TouchCenter is not active, it will automatically return to the "Home" screen after the selected To Homepage After time has expired (unless "Never" option is selected). To select the To Homepage After time, do the following:

SCREEN	ACTION
	<p>1. On the "Setup" screen, press the <b>To Homepage After</b> "arrow" button. A drop-down list displaying the time period options is displayed.</p>
	<p>2. Select the time period option you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p>

## TouchCenter Setup (Cont'd)

SCREEN	ACTION
	<p>3. Press either the "Home" or "Back" button. A <b>Settings Changed!</b> pop-up window is displayed asking <b>"Remember New Settings?"</b> Select <b>Yes</b> to save the change or <b>No</b> to discard the change.</p>
	<p>When the Update is complete the TouchCenter goes to the "Home" screen or "More Choices" screen depending on whether you pressed the "Home" or "Back" button, respectively.</p>

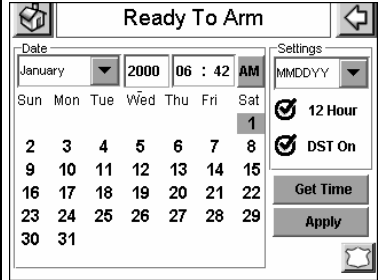
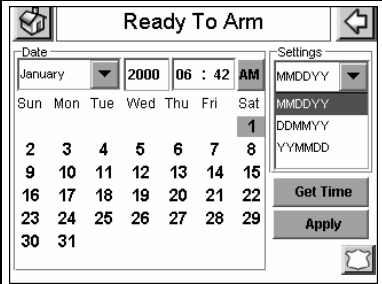
## ***TouchCenter Setup (cont'd)***

### **How to Set the Time and Date**

You can set the time and date from the **Set Time & Date** screen. Pressing the Time and Date button located at the bottom of the TouchCenter screen displays the **Set Time & Date** screen.

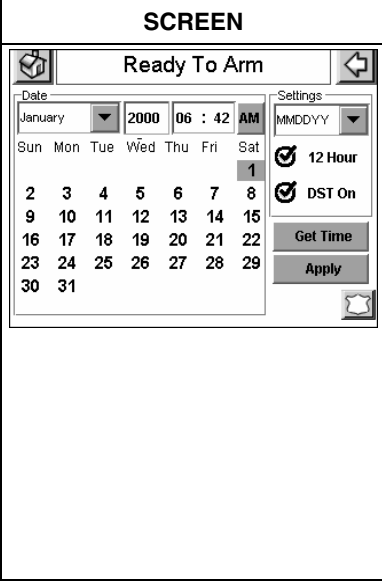
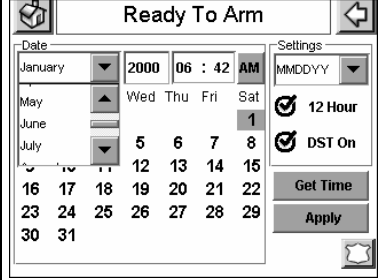
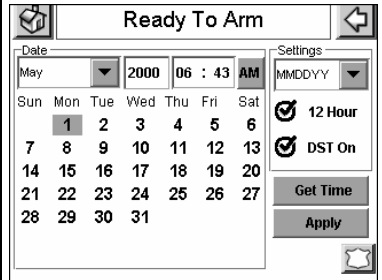
- When the time is set it will be stored in the TouchCenter and sent to the control panel when you press the **Apply** button and answer **Yes** to the following prompt. Additionally, when using the TouchCenter with a residential panel, the panel will download its time into the TouchCenter once an hour after the clock is set.
- If **Get Time** is pressed, the TouchCenter will download the time and date from the control panel and exit the Set Time & Date screen. **Note:** This button appears with residential panels only.
- If **DST On** (Daylight Savings Time) is selected, the TouchCenter will adjust for Daylight Savings time beginning on the first Sunday in April and ending on the last Sunday in October.

To set the time and date, press the Time and Date button located at the bottom of the screen and do the following:

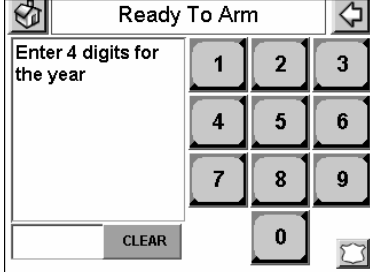

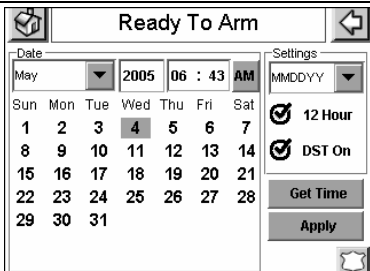
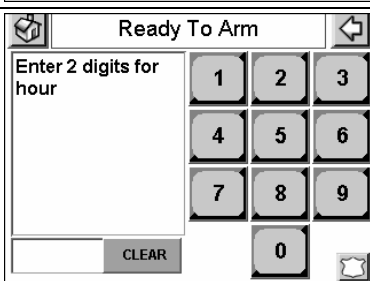
SCREEN	ACTION
	<p>1. On the "Time and Date" screen, press the <b>Month/Day/Year</b> "arrow" button in the "Settings" area of the screen. A drop-down list displaying the Month/Day/Year display formats is displayed.</p>
	<p>2. Select the display format you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p>



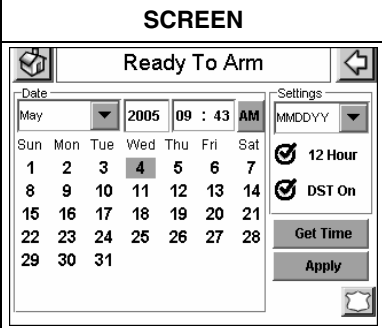
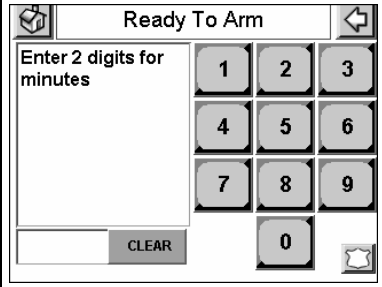
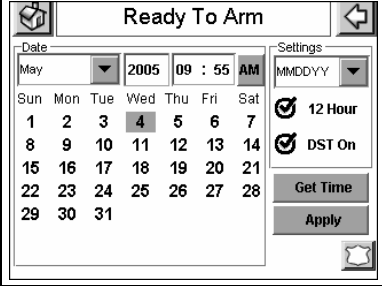
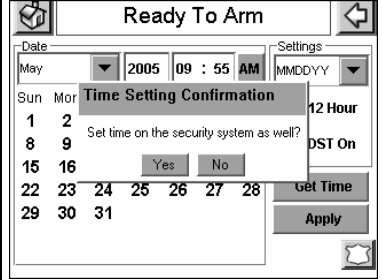
## TouchCenter Setup (Cont'd)

SCREEN	ACTION
 <p>The screenshot shows the 'Ready To Arm' screen. At the top, there is a home icon, the title 'Ready To Arm', and a back icon. Below this is a 'Date' section with a dropdown for 'January', the year '2000', and the time '06 : 42 AM'. To the right is a 'Settings' section with a dropdown for 'MMDDYY'. Below the date is a calendar grid with days of the week (Sun-Sat) and dates (1-31). To the right of the calendar are two options: '12 Hour' with a checked circle and 'DST On' with a checked circle. At the bottom right are 'Get Time' and 'Apply' buttons, and a small map icon.</p>	<p>3. Select if you want a 12-hour or 24-hour format for your time display by touching the circle to the left of the <b>12 Hour</b> display in the "Settings" area of the screen. A check mark in the circle indicates a 12-hour display format.</p> <p>4. Select if you want Daylight Savings Time to affect your system clock by touching the circle to the left of the <b>DST On</b> display in the "Settings" area of the screen. A check mark in the circle indicates that Daylight Savings Time is applicable.</p> <p>5. On the "Time and Date" screen, press the <b>Month</b> "arrow" button. A drop-down list displaying the months is displayed.</p>
 <p>The screenshot shows the 'Ready To Arm' screen. The 'Date' section now has a dropdown menu open for the month, showing 'January', 'May', 'June', and 'July'. The year '2000' and time '06 : 42 AM' remain the same. The 'Settings' section and calendar grid are also visible.</p>	<p>6. Select the current month by pressing it. The drop-down list closes automatically and the selection is displayed.</p>
 <p>The screenshot shows the 'Ready To Arm' screen. The 'Date' section now has a dropdown menu open for the year, showing '2000'. The month is now 'May' and the time is '06 : 43 AM'. The 'Settings' section and calendar grid are also visible.</p>	<p>7. On the "Time and Date" screen, press the Year that is being displayed. A Year screen is displayed with the instructions to <b>Enter 4 digits for the year.</b></p>

## TouchCenter Setup (cont'd)

SCREEN	ACTION
 <p>The screenshot shows a window titled "Ready To Arm" with a close button in the top right. The main area contains the text "Enter 4 digits for the year" and a numeric keypad with buttons for digits 0-9. A "CLEAR" button is located at the bottom left of the keypad area.</p>	<p>8. Enter the four digits for the current year. The window closes automatically and the selection is displayed.</p>
 <p>The screenshot shows the "Ready To Arm" window with a date selection interface. It includes a "Date" section with a month dropdown (May), a year dropdown (2005), and a time display (06 : 43 AM). Below this is a calendar grid for the month of May. To the right, there are "Settings" options for "12 Hour" and "DST On", both of which are checked. "Get Time" and "Apply" buttons are at the bottom.</p>	<p>9. Select if it is AM or PM by pressing on the <b>AM</b> or <b>PM</b> display on the screen. Each depression switches the AM/PM display.</p> <p>10. Select the day of the month by touching the proper day in the display. The selected date will be highlighted on the screen.</p>
 <p>This screenshot is identical to the previous one, but the number "4" in the calendar grid is highlighted, indicating the selection of the 4th day of the month.</p>	<p>11. On the "Time and Date" screen, press the Hour that is being displayed. An hour screen is displayed with the instructions to <b>Enter 2 digits for the hour.</b></p>
 <p>The screenshot shows the "Ready To Arm" window with the text "Enter 2 digits for hour" and a numeric keypad with buttons for digits 0-9. A "CLEAR" button is at the bottom left.</p>	<p>12. Enter the two digits for the current hour. The window closes automatically and the selection is displayed.</p>

## TouchCenter Setup (Cont'd)

SCREEN	ACTION
	<p>13. On the "Time and Date" screen, press the Minutes that is being displayed. An minute screen is displayed with the instructions to <b>Enter 2 digits for the minutes</b>.</p>
	<p>14. Enter the two digits for the current minute. The window closes automatically and the selection is displayed.</p>
	<p>15. On the "Time and Date" screen, press the <b>Apply</b> button. A confirmation screen is displayed.</p>
	<p>16. Press the <b>Yes</b> button to save the time changes in your security system or press the <b>No</b> button to have the changes affect the TouchCenter only. <b>Note:</b> A <b>Yes</b> response is recommended.</p>

# TouchCenter Operating Modes

## Operating Modes (Chime, Voice, and Voice Chime)

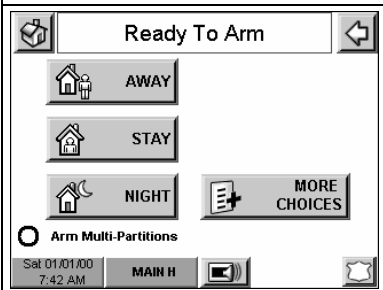
Operating modes allows you to turn the TouchCenter chime mode on or off. Additionally, you may also turn the voice mode on or off. The operating modes provide the following features:

- Chime Mode – When selected, a request is sent to the alarm panel requesting that the panel chime the TouchCenter whenever a change in zone status occurs.
- Voice Mode – When selected, a request is sent to the alarm panel requesting that the panel initiate TouchCenter voice enunciation whenever a change in system status occurs such as Armed, Disarmed, or Alarms.
- Voice Chime Mode – The chime mode and voice more are in effect with the chime followed by voice enunciation.

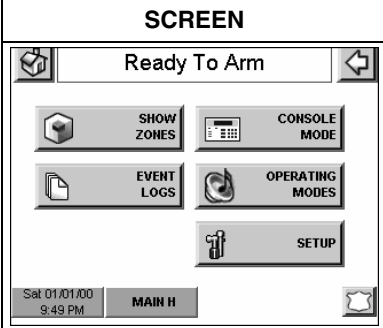
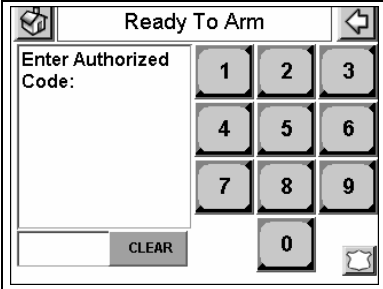
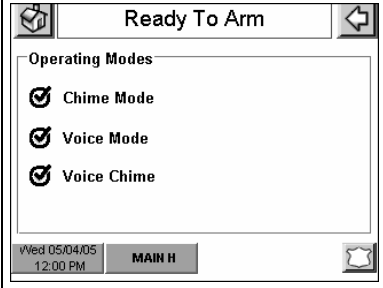
## How to Access Operating Modes

Access the "Operating Modes" feature as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"><li>2. Press the <b>MORE CHOICES</b> button. The "More Choices" screen is displayed.</li></ol>

## TouchCenter Operating Modes (Cont'd)

SCREEN	ACTION
	<p>3. Press the <b>OPERATING MODES</b> button on the "More Choices" screen. The "User Authorization" screen is displayed with the instructions "<b>Enter Authorized Code</b>".</p>
	<p>4. Enter your "Master" code. The "Operating Modes" screen is displayed.</p>
	<p>5. Touch the Chime Mode button to turn the Chime Mode on or off. A checkmark appears in the button when the Chime Mode is "ON". Note that it may take a few seconds for the Chime Mode to take effect.</p> <p>6. Touch the Voice Mode button to turn the Voice Mode on or off. A checkmark appears in the button with the Voice Mode is "ON" Note that if the Chime Mode and Voice Mode are both selected, the Voice Chime button will automatically be selected.</p>
	<p>Press the "HOME" or "BACK" button after making your selection. When the TouchCenter exits the "Operating Modes" screen, your selection is saved.</p>

# Maintaining Your System

## How to Clean your TouchCenter

**IMPORTANT:** Do not use an abrasive cleaning agent or abrasive cloth when cleaning your TouchCenter or damage to the TouchCenter may occur.



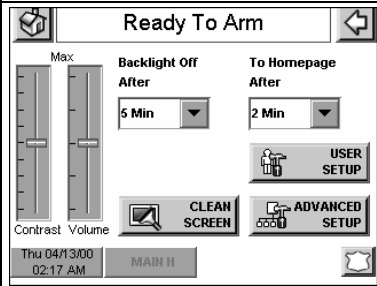
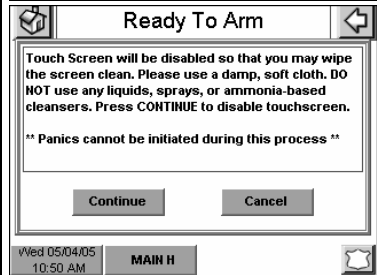
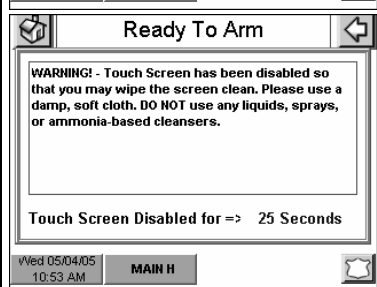
The **Emergency** screen cannot be accessed while running in the clean screen mode.

Clean the TouchCenter as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> <li>2. Press the <b>MORE CHOICES</b> button. The "More Choices" screen is displayed.</li> </ol>
	<ol style="list-style-type: none"> <li>3. Press the <b>SETUP</b> button on the "More Choices" screen. The "Setup" screen is displayed.</li> </ol>

## Maintaining Your System (Cont'd)

SCREEN	ACTION
	<p>4. Press the <b>CLEAN SCREEN</b> button. A pop-up window displaying <b>“Touch Screen will be disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liquids, sprays, or ammonia-based cleansers. Press CONTINUE to disable touchscreen.”</b></p>
	<p>When the <b>Continue</b> button is pressed the <b>“Touch Screen Disabled for =&gt; 30 Seconds”</b> message is displayed. During these 30 seconds the touch screen should be wiped clean of fingerprints using a mild soap solution and a soft cloth. When the counter reaches zero, the window automatically closes and the touch screen is active.</p>
	<p><b>Note:</b> Do not spray cleaning agent directly on the screen, spray it on cloth then wipe surface area.</p>

### Routine Care

- Treat the components of your security system as you would any other electrical equipment. Do not slam sensor-protected doors or windows.
- Keep dust from accumulating on the keypad and all protective sensors, particularly on motion sensors and smoke detectors.

The keypad case and sensors should be carefully dusted with a dry soft cloth. **Do not spray water or any other fluid on the units.**

## ***Glossary***

---

The following terms are used throughout the guide.

**Arm/Disarm:** “Armed” simply means that the burglary portion of your system is turned ON and is in a state of readiness. “Disarmed” means that the burglary system is turned OFF, and must be rearmed to become operational. However, even in a “disarmed” state, “emergency” and “fire” portions of your system are still operational.

**Bypass:** To intentionally leave a specific zone unprotected while the rest of the system is armed.

**Console Emulation:** Console Emulation Mode allows you to use a TouchCenter interface just as you would a regular system keypad. All commands shown in Console Emulation mode can also be executed from a standard alpha keypad.

**Day/Night Zone:** An area of protection whose violation causes a trouble indication during the disarmed (DAY) mode and an alarm during the armed (NIGHT) mode.

**Delay Zone:** An area of protection containing doors most frequently used to enter or exit (typically, a front door, back door, or door from the garage into the building). The delay zone allows sufficient time for authorized entry or exit without causing an alarm. Consult your installer for the entry and exit delay times that have been set for your system during installation and record them on the separate sheet provided in this guide.

**Home Screen:** The screen that is normally displayed on the TouchCenter when entries are not being made. The TouchCenter will return to this screen with the “Home” button is pressed or when an entry is not received for a pre-set period of time.

**Keypad:** This is the device through which you operate your system. It contains numbered pushbuttons similar to those on telephones or calculators. These keys control the arming or disarming of the system, and perform other functions that were previously described in this manual.

**Lighting Button:** A button on the Home screen that allows you to control lights or other devices if so programmed by your system installer.



## ***Glossary (Cont'd)***

---

**Master Code:** A 4-digit code that gives users access to all of the system's functions, including the ability to program other users in the system. See also "User Code."

**Message Button:** A button on the Home screen that allows you to record and retrieve voice messages.

**Night:** An arming mode for the system. Your system installer set the type of arming and the zones armed when using this mode.

**Partition:** An independent group of zones that can be armed and disarmed without affecting other zones or users.

**User Code:** A 4-digit code that gives users access to the system's basic functions. See also "Master Code."

**Zone:** A specific protection point (e.g., door or window).

## NOTES

## NOTES

## NOTES

## NOTES

## NOTES

## NOTES

### **ONE YEAR LIMITED WARRANTY**

Honeywell International Inc., acting through its ADEMCO business ("Seller"), 165 Eileen Way, Syosset, New York 11791, warrants its security equipment (the "product") to be free from defects in materials and workmanship for one year from date of original purchase, under normal use and service. Seller's obligation is limited to repairing or replacing, at its option, free of charge for parts, labor, or transportation, any product proven to be defective in materials or workmanship under normal use and service. Seller shall have no obligation under this warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than the Seller. In case of defect, contact the security professional who installed and maintains your security equipment or the Seller for product repair.

This one year Limited Warranty is in lieu of all other express warranties, obligations or liabilities. THERE ARE NO EXPRESS WARRANTIES, WHICH EXTEND BEYOND THE FACE HEREOF. ANY IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES MADE BY SELLER IN CONNECTION WITH THIS PRODUCT, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. ANY ACTION FOR BREACH OF ANY WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN 12 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT. Some states do not allow limitation on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Seller does not represent that the product may not be compromised or circumvented; that the product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product will in all cases provide adequate warning or protection. Buyer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No increase or alteration, written or verbal, to this warranty is authorized.

## **Honeywell**



K10498 8/05 Rev. A

165 Eileen Way, Syosset, NY 11791  
Copyright © 2005 Honeywell International Inc.  
[www.honeywell.com/security](http://www.honeywell.com/security)